

Crumbuino-Nano

Arduino-compatible OEM module with ATmega328 controller and CP2102 USB UART converter.

AVAILABLE OPTIONS


Module	Processor	RAM	EEPROM	Flash	Peripherals
Crumbuino-Nano	ATmega328	2kB SRAM	1kB EEPROM	32kB Flash	- CP2102 USB-UART converter - mini USB B 5pin connector - status LED and tiny reset button

ARDUINO BOOTLOADER

The Crumbuino-Nano module comes preloaded with the Arduino ATmega328 bootloader. Also activated is the auto-reset function, providing a seamless integration to the Arduino IDE for uploading of a program without the need to reset the module in advance.

AUTO RESET FEATURE

Jumper J1 (on the bottom of the module) is closed by default, thus enabling the automatic reset of the ATmega328 by the Arduino IDE before connecting the bootloader and upload a program.

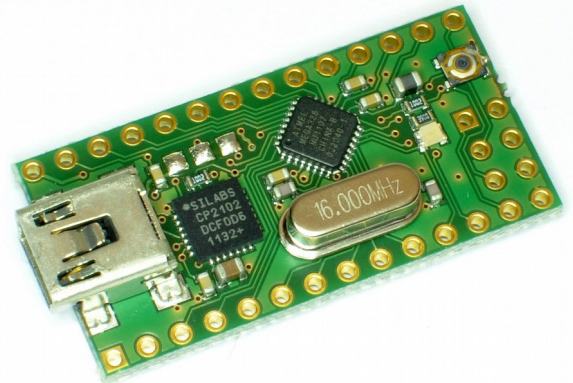

USB INTERFACE

A USB UART converter CP2102 by Silabs is connected to the MCU's USART RXD/PD0 and TXD/PD1. A standard 5pin mini USB B connector is available onboard and allows for easy connection to a host PC. The CP2102 is always powered from USB bus.


POWER SUPPLY OPTIONS

The module can be power either externally (VCC pin on the expansion headers) or from USB bus 5V or from the CP2102's internal 3.3V regulator.

J2 selects between these options:

- open: external power supply (1.8V – 5.5V)
- 1-2: USB bus powered (approx. 5V)
- 2-3: CP2102 3.3V powered

If you add external components in case of USB power supply, make sure to stay within the allowed current consumption for USB powered devices (100mA/500mA)! When powering from CP2102 3.3V regulator, a maximum current of 100mA may be drawn. Please read the CP2102 data sheet on maximum power dissipation of the CP2102 and requirements on power consumption from the USB bus!!!

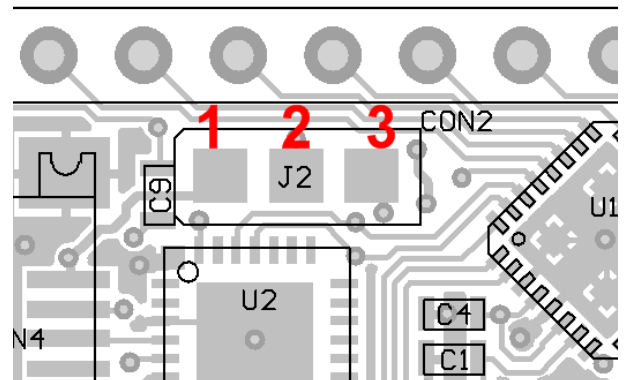

RESET BUTTON

A tiny reset button is available to force a manual reset of the MCU. A 10kOhm pullup resistor is connected to the MCU's reset signal to make it less susceptible to EMI, than with just the MCU-internal pullup resistor.

STATUS LED

A green low-current status LED is connected low-active to the Arduino Pin 10, corresponding to MCU's signal PB2. Setting this pin to output and low will turn on the LED.

ISP CONNECTOR


An ISP header with Atmel's standard 6-pin pinout is available on the module, see pictures below for location and pinout.

EXPANSION CONNECTORS

Two 14 pin headers provide all free MCU signals.

PIN CONFIGURATION AND DIMENSIONS

The picture on the right shows the pin names in Arduino environment (black) as well as the original ATmega328 pin names (grey).

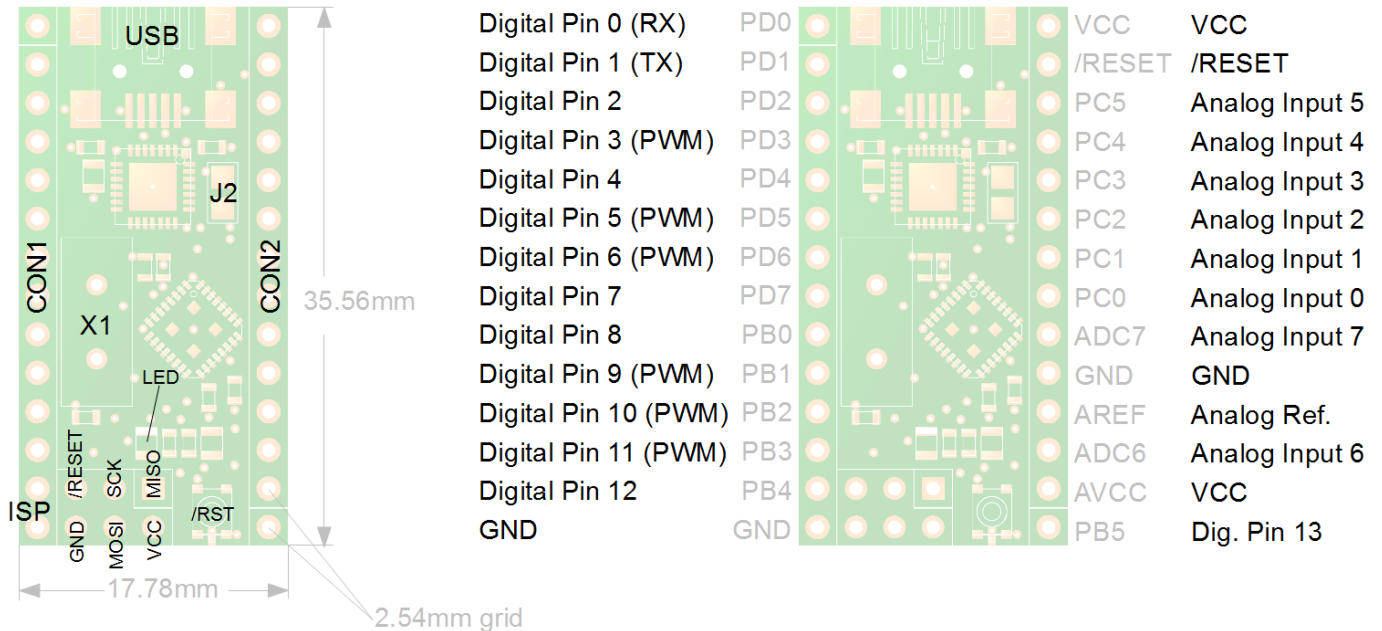

Note: J2 has three pads on V2.3! See section "Power Supply Options"

DESIGN AND HANDLING GUIDELINES

This module – just like any other semiconductor devices – is susceptible to damage by ESD. Suitable precautions should be taken when handling and transporting devices. The possible damage to devices depends on the circumstances of the handling and transporting, and the nature of the device. The extent of damage can vary from immediate functional or parametric malfunction to degradation of function or performance in use over time. Devices suspected of being affected should be replaced.

OPERATING CHARACTERISTICS

Symbol	Parameter	Condition	Min	Typ	Max	Units
Vcc	Supply Voltage	16 MHz	4.5		5.5	V
Icc	Power Supply Current <i>(Icc strongly depends on CPU activity, like frequency, power saving modes, etc. as well as external circuitry, io pin input and output current, etc. The values denoted here are for reference only and can differ from final application values.)</i>	Active 16MHz Vcc = 5V		10		mA
		USB bus active <i>(power is drawn from USB bus)</i>		+20		mA
T	Operating Temperature <i>(industrial temperature range on request)</i>		-20		+70	°C

SCOPE OF DELIVERY

This module is being shipped with preloaded Arduino bootloader and 16MHz crystal.

DEVELOPMENT TOOLS

As an Arduino-compatible module, the Crumbuino-Mega is intended to be used with the Arduino IDE as development environment.

- Arduino Homepage: <http://arduino.cc/en/>
- Getting Started Page: <http://arduino.cc/en/Guide/HomePage>
- Arduino Software Page: <http://arduino.cc/en/Main/Software>
- chip45 Arduino Extensions: <http://download.chip45.com/chip45-arduino-extension.zip>
- Crumbuino-Nano LED blink example sketch: http://download.chip45.com/Blink_Crumbuino-Nano.zip

WHAT ELSE DO YOU NEED?

The only thing you really need, is a USB cable to connect the Crumbuino-Mega to a PC or Mac:

- Cable mini-USB-B to USB-A: <http://go.chip45.com/KAB-USB-A-miniB-1.5>

Declaration of Electro Magnetic Conformity of the CHIP45 „Crumbuino-Nano“



CHIP45 embedded microcontroller modules (henceforce products) are designed for installation in electrical appliances or as dedicated evaluation boards (i.e.: for use as a test and prototype platform for hardware/software development) in laboratory environments.

Caution:

CHIP45 products lacking protective enclosures are subject to damage by ESD and, hence, may only be unpacked, handled or operated in environments in which sufficient precautionary measures have been taken in respect to ESD-dangers. It is also necessary that only appropriately trained personnel (such as electricians, technicians and engineers) handle and/or operate these products. Moreover, CHIP45 products should not be operated without protection circuitry if connections to the product's pin header rows are longer than 3m.

CHIP45 products fulfill the norms of European Union's Directive for Electro Magnetic Conformity only in accordance to the descriptions and rules of usage indicated in this document (particularly in respect to the pin header row connectors, power connector and serial interface to a host-PC).

Implementation of CHIP45 products into target devices, as well as user modifications and extensions of CHIP45 products, is subject to renewed establishment of conformity to, and certification of, Electro Magnetic Directives. Users should ensure conformance following any modifications to the products as well as implementation of the products into target systems

DISCLAIMER

In this manual are descriptions for copyrighted products that are not explicitly indicated as such. The absence of the trademark (™) and copyright (©) symbols does not imply that a product is not protected. Additionally, registered patents and trademarks are similarly not expressly indicated in this manual.

The information in this document has been carefully checked and is believed to be entirely reliable. However, chip45 GmbH & Co. KG assumes no responsibility for any inaccuracies. chip45 GmbH & Co. KG neither gives any guarantee nor accepts any liability whatsoever for consequential damages resulting from the use of this manual or its associated product. chip45 GmbH & Co. KG reserves the right to alter the information contained herein without prior notification and accepts no responsibility for any damages which might result.

Additionally, chip45 GmbH & Co. KG offers no guarantee nor accepts any liability for damages arising from the improper usage or improper installation of the hardware or software. chip45 GmbH & Co. KG further reserves the right to alter the layout and/or design of the hardware without prior notification and accepts no liability for doing so.

© Copyright 2011 chip45 GmbH & Co. KG, D-35440 Linden.

Rights - including those of translation, reprint, broadcast, photomechanical or similar reproduction and storage or processing in computer systems, in whole or in part - are reserved. No reproduction may occur without the express written consent from chip45 GmbH & Co. KG.

CONTACT INFORMATION

Address: chip45 GmbH & Co. KG
Am Pfad 8
D-35440 Linden
Germany

Ordering Information: +49 (6403) 9253-53
info@chip45.com

Technical Support: +49 (6403) 9253-53
support@chip45.com

Fax: +49 (6403) 9253-50

Web Site: <http://www.chip45.com>